


Shoulder strap adjustment

Use this guide to adjust the length of the shoulder straps.


A Shoulder strap and adjustment buckle

The adjustment buckle is attached to the rear plate bag by a strap secured inside the bag with hook-and-loop fastening. The strap passes through the D-shaped opening in the buckle.

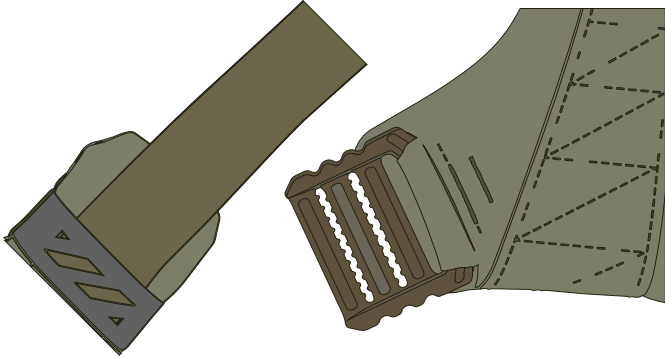


B Threading overview

Pass the loose webbing through the top slot, back through the middle slot, through the D-shaped opening, and finally back through the first slot.

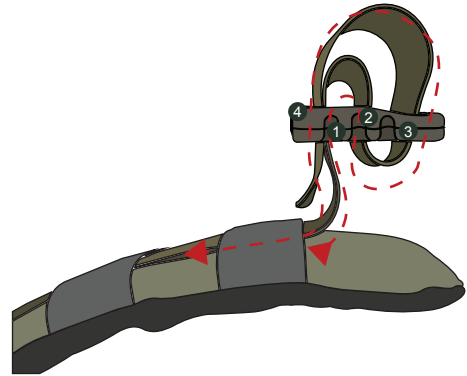


1 Insert the long end

Feed the webbing through the outermost slot in the buckle. This sets the strap length and the height of the plate bag.

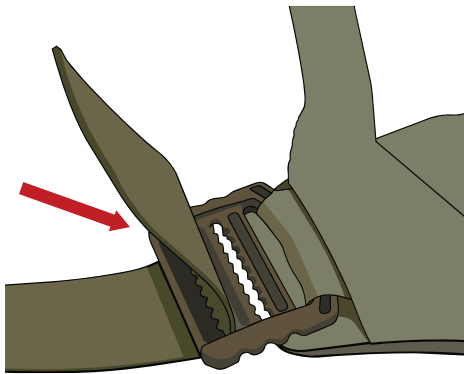


2 Thread the webbing back through

Once the correct length is set, pass the end of the webbing back through the middle slot of the buckle.

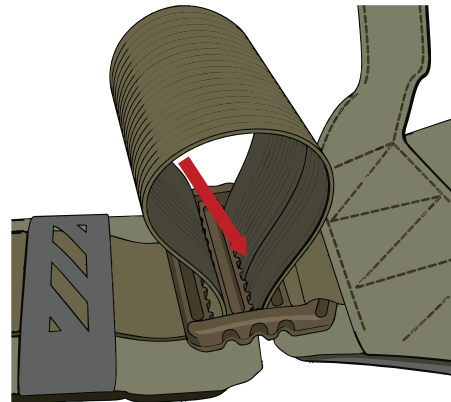


3 Adjusting the tension.

Adjust the webbing tension, then pass the end through the D-shaped opening in the buckle.

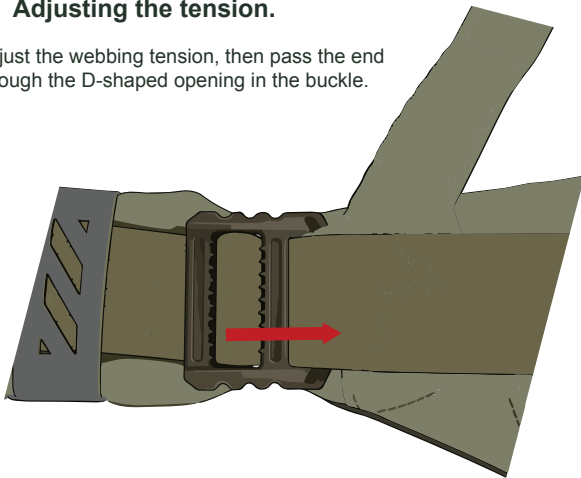

4 Secure the loose end

Secure the remaining webbing by passing it through the first slot. Inserting one corner first makes this easier.

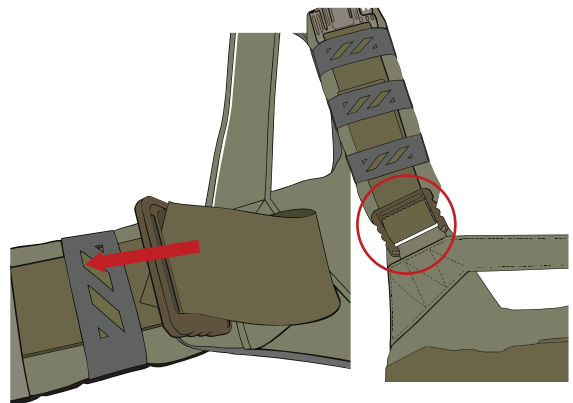


Height adjustment: For a higher plate bag position or a slimmer build, bypass the Hypalon loop for a better fit.

Regulacja pasów naramiennych

Skorzystaj z tej instrukcji, aby wyregulować długość pasów naramiennych.


A Pas naramienny i klamra regulacyjna

Klamra regulacyjna jest połączona z tylną kieszenią na płytę taśmą mocowaną na rzep wewnątrz kieszeni. Taśma przechodzi przez otwór w kształcie litery D w klamrze.

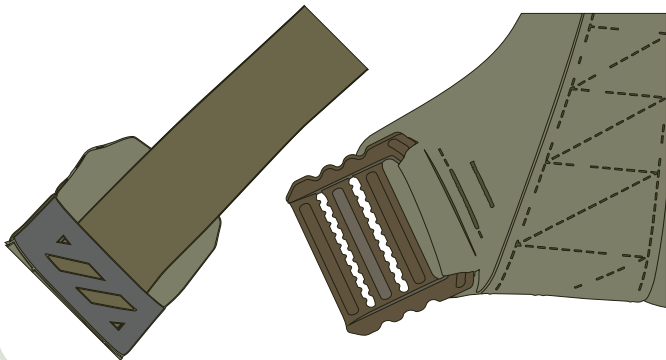


B Schemat przeplatania taśmy

Przełóż wolny koniec taśmy przez górną szczelinę, z powrotem przez środkową, następnie przez otwór w kształcie litery D i ponownie przez pierwszą szczelinę.

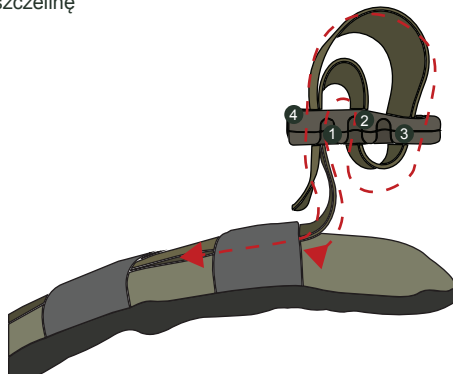


1 Przełóż koniec taśmy

Przełóż taśmę przez skrajną szczelinę klamry. W ten sposób ustalisz długość pasa i wysokość położenia kieszeni na płycie.

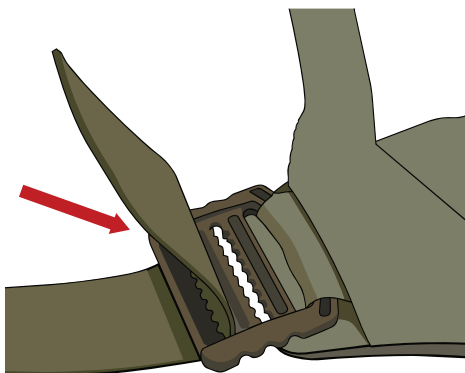


2 Przepleć taśmę z powrotem

Po ustawieniu odpowiedniej długości przełóż koniec taśmy z powrotem przez środkową szczelinę klamry.

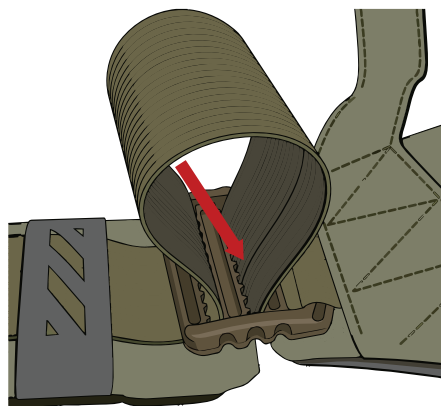


3 Wyreguluj napięcie taśmy

Wyreguluj napięcie taśmy, a następnie przełóż jej koniec przez otwór w kształcie litery D w klamrze.

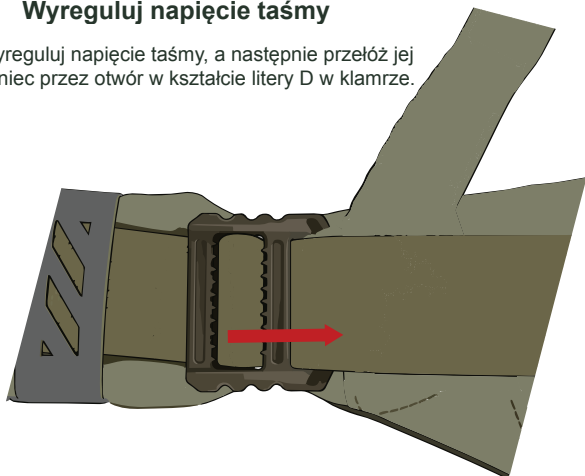

4 Zabezpiecz wolny koniec

Zabezpiecz pozostały odcinek taśmy, przekładając go przez pierwszą szczelinę. Łatwiej zacząć od wsunięcia jednego narożnika taśmy.

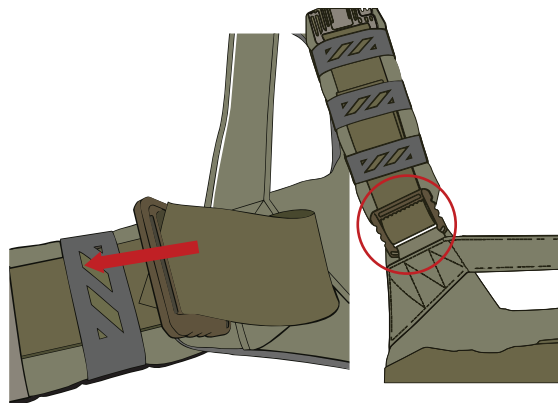

Regulacja wysokości: Aby podnieść kieszenie na płycie lub dopasować je do smuklejszej sylwetki, pomiń szlufkę z Hypalonu.